



4.5" DOWNLIGHT CYLINDER SURFACE MOUNT






| INSTRUCTION KEY | INFORMATION |
|-----------------|---|
| | INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN |
| (i) ATTENTION | REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION |
| | FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY |
| 🕖 POWER ON | DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICA L STRESS OR DEBRIS |
| DOWER OFF | TURN OFF POWER DURING INSTALLATION OR SERVICING |

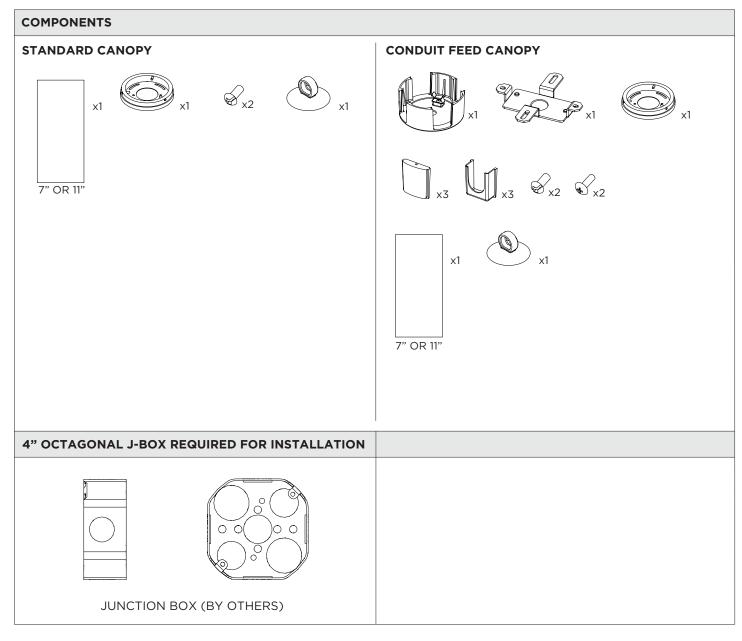


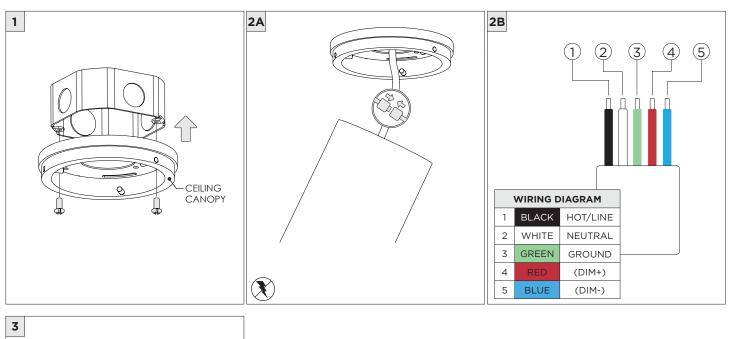

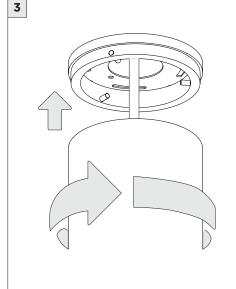




4.5" DOWNLIGHT CYLINDER SURFACE MOUNT

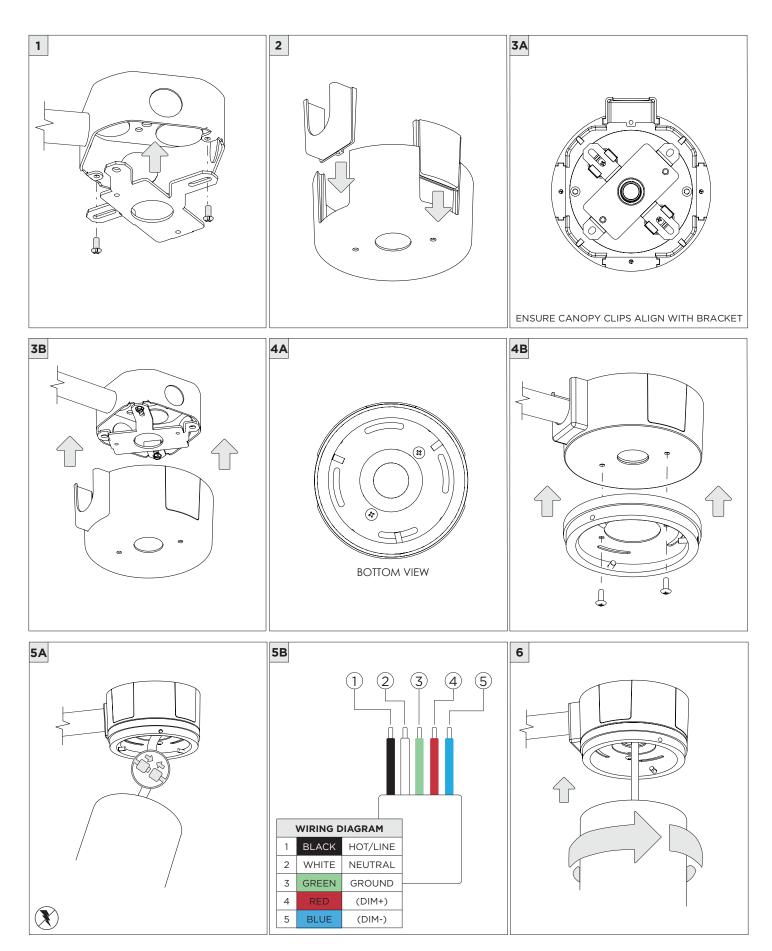





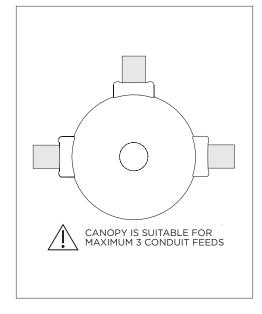




DRIVER SERVICING

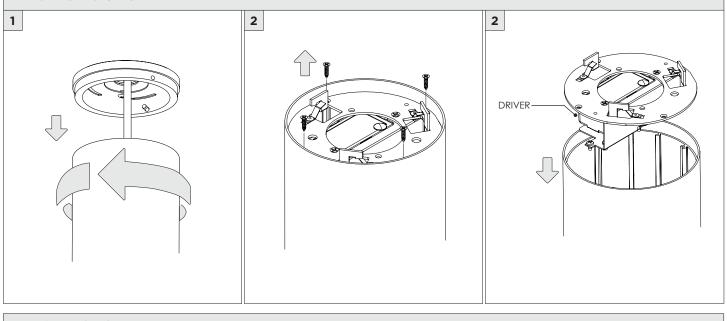

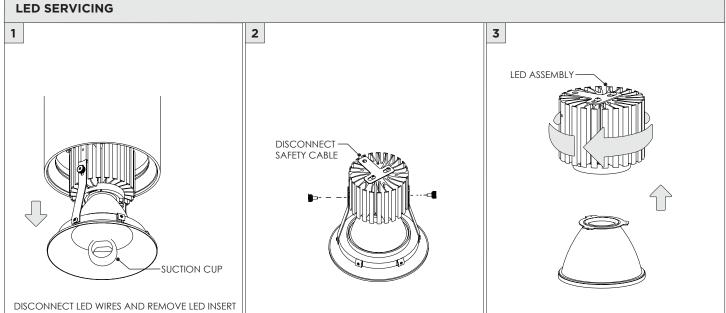



DRIVER SERVICING

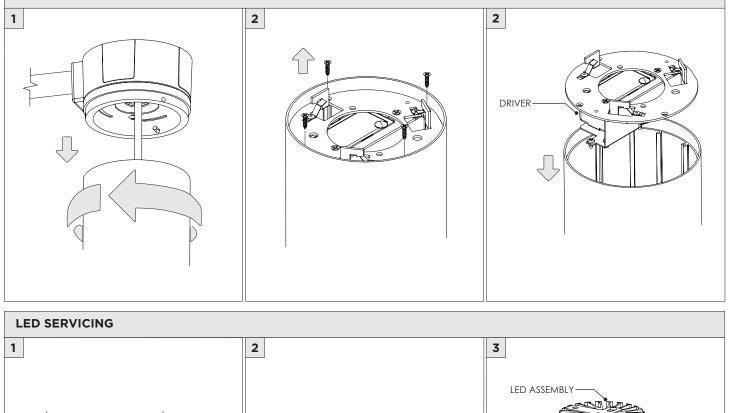

-4

DISCONNECT -SAFETY CABLE

Ъ-

DISCONNECT LED WIRES AND REMOVE LED INSERT

-SUCTION CUP