










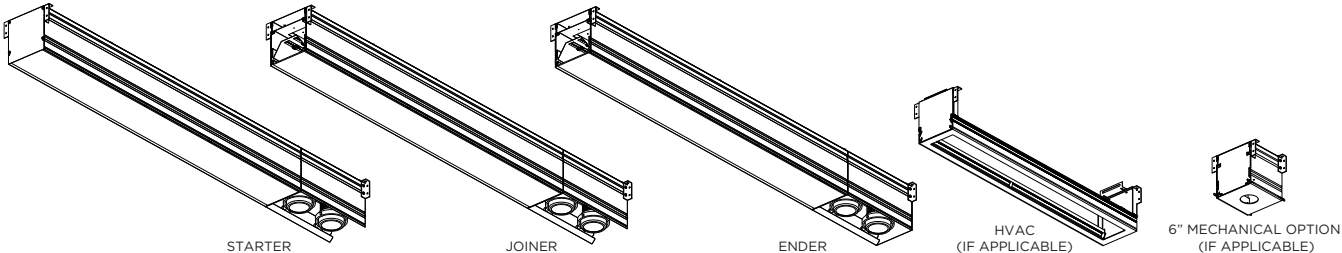










3Gi-58RSL, 3Gi-48RSL
5.8", and 4.8" INTEGRATED RECESSED SLOT
TRIMLESS




⚠ FOR NEW CONSTRUCTION INSTALLATION ONLY
ℹ THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT

FIXTURE TYPES		INCLUDED COMPONENTS				
58RSL PROFILE	48RSL PROFILE	 STARTER JOINER ENDER HVAC (IF APPLICABLE) 6" MECHANICAL OPTION (IF APPLICABLE)				
ILLUMINATED OPTIONS		INTEGRATED MECHANICAL OPTIONS				
DL33R - 3.3" ROUND DOWNLIGHT	DL33S - 3.3" SQUARE DOWNLIGHT	DZ33R - 3.3" ROUND ZOIE	DZ33S - 3.3" SQUARE ZOIE	CM - CAMERA	SP - SPEAKER	OS - OCCUPANCY SENSOR
						
M7 - MADISON DUAL AXIS	4LI - 3.5" LINIA	2LI - 2" LINIA		WF - WIFI ACCESS POINT	MC - MICROPHONE	
						
				HV - HVAC	SD - SMOKE DETECTOR	ST - FIRE STROBE
						
					FS - FIRE SPRINKLER	JB - JUNCTION BOX
						

INSTRUCTION KEY	INFORMATION
⚠ ADDITIONAL	INSTALLATION SHOULD ONLY BE PERFORMED BY A CERTIFIED ELECTRICIAN
ℹ ATTENTION	REFER TO LOCAL/NATIONAL CODES FOR PROPER INSTALLATION
⚡ POWER ON	FAILURE TO FOLLOW INSTALLATION INSTRUCTION MAY VOID THE WARRANTY
⏻ POWER OFF	DO NOT TOUCH LEDS. LEDS MUST BE PROTECTED FROM MECHANICAL STRESS OR DEBRIS
	TURN OFF POWER DURING INSTALLATION OR SERVICING


OVERVIEW

TRIMLESS - XTR

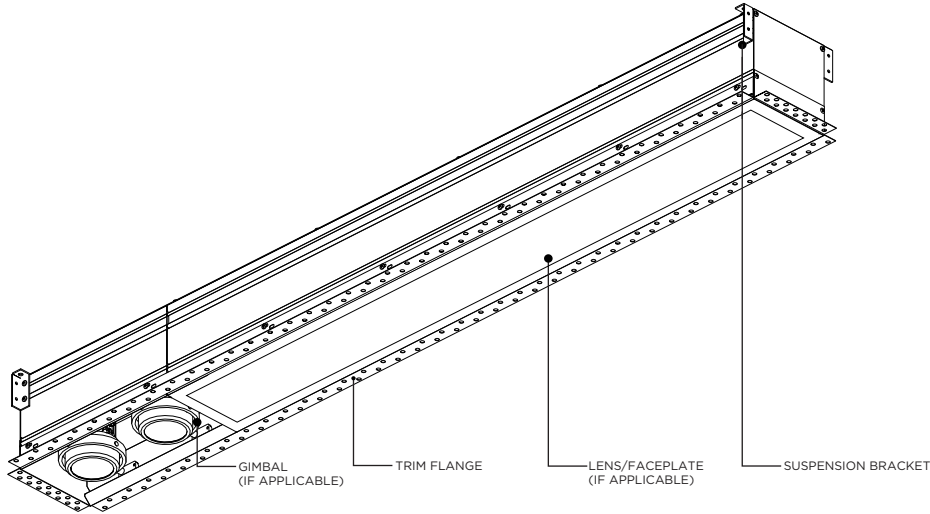

i ALL INTEGRATED MECHANICAL OPTIONS ARE PROVIDED AS 6" SECTIONS

INSTALLATION INSTRUCTIONS




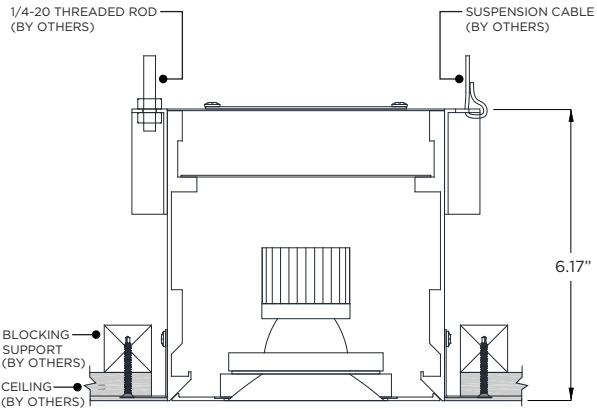


TRIMLESS - XTR - CEILING CUT-OUT DIMENSIONS





FIXTURE TYPE	WIDTH	LENGTH
3Gi-48RSL	4.95"	LENGTH + 0.35"
3Gi-58RSL	5.95"	LENGTH + 0.40"

ASYMMETRIC LENS ORIENTATION


3Gi-2" LINEAR - ASYMMETRIC LENS/REFLECTOR ORIENTATION

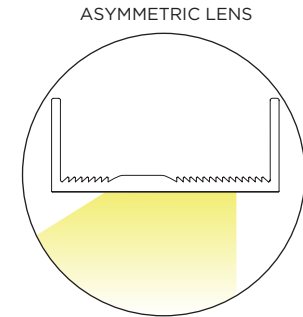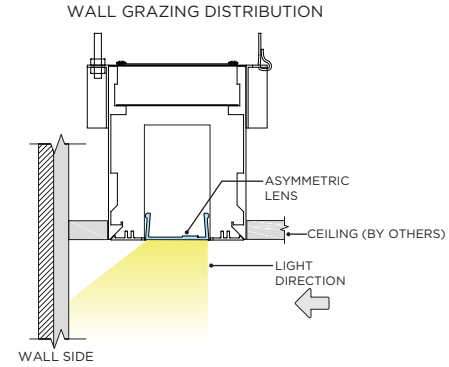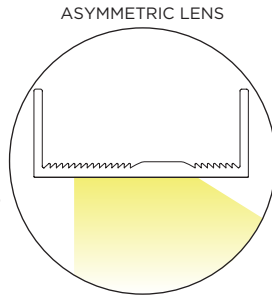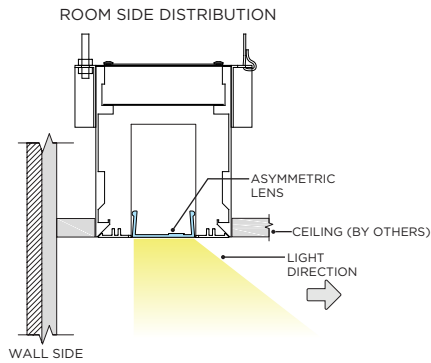


3Gi-4" LINEAR - ASYMMETRIC LENS/REFLECTOR ORIENTATION

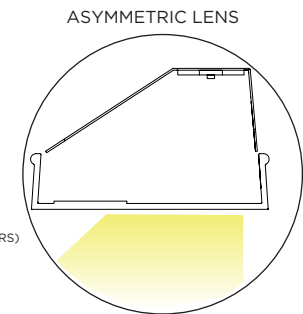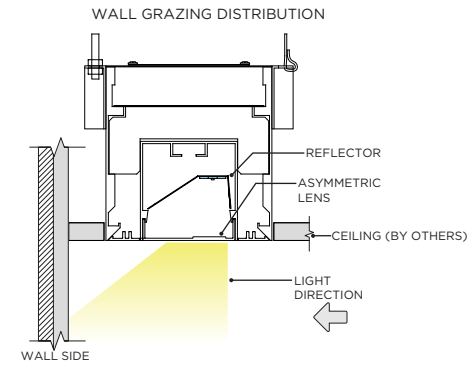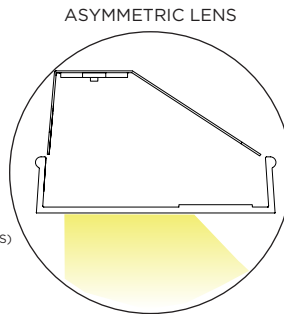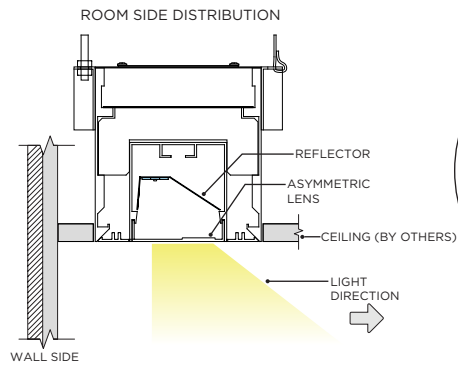

THREADED ROD LOCATION

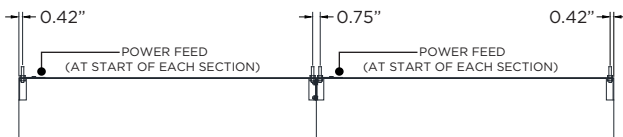


IDENTIFICATION AND PREPARATION

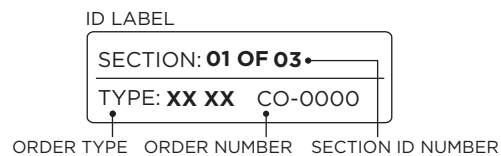

i IDENTIFY FIXTURE SECTIONS BY THE ID LABELS FOUND ON THE BOX INSIDE THE SECTIONS

ID LABEL

SECTION: **01 OF 03**
TYPE: **XX XX** CO-0000



STARTER

JOINER


ENDER

1 INTEGRATED MECHANICAL COMPONENTS




i ALL INTEGRATED MECHANICAL COMPONENTS ARE NOT INSTALLED BY 3G

2 MICROPHONE SHOWN AS EXAMPLE

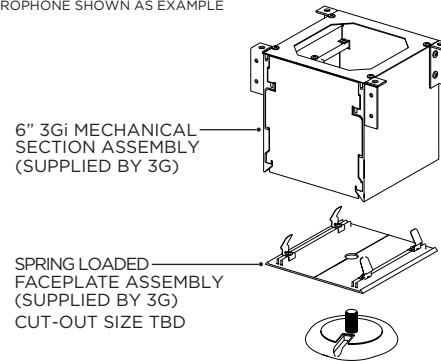


UNCLIP FACEPLATE FROM HOUSING TO ACCESS INSIDE OF HOUSING SECTION










INTEGRATED HVAC

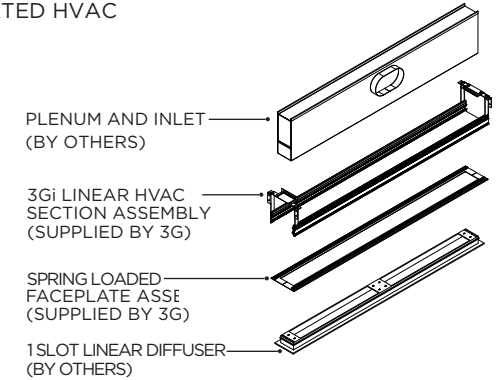


i ALL INTEGRATED HVAC COMPONENTS ARE NOT INSTALLED BY 3G

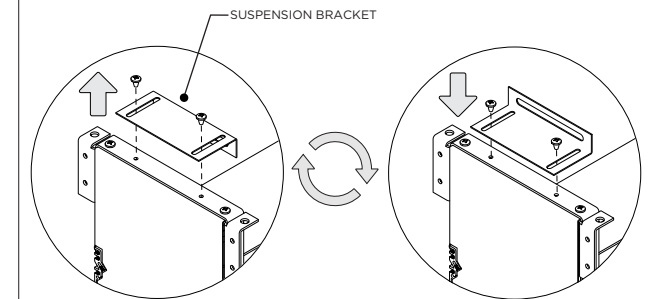


! HVAC SUSPENSION BRACKET IS SHIPPED **UPSIDE DOWN**
FLIP BRACKET ORIENTATION BEFORE HVAC INSTALLATION

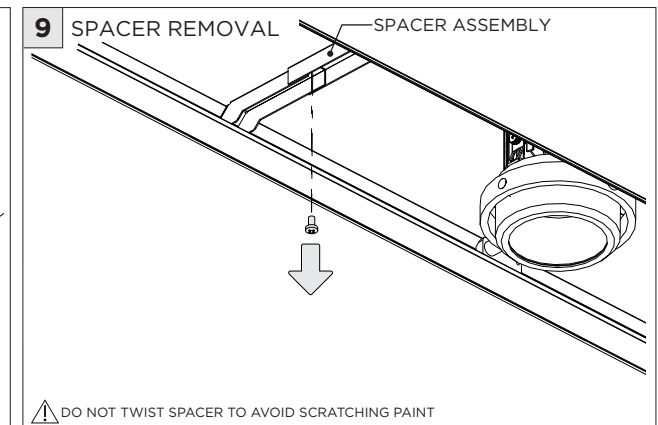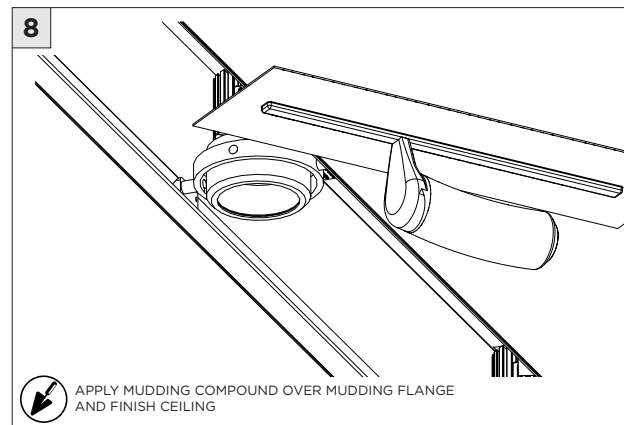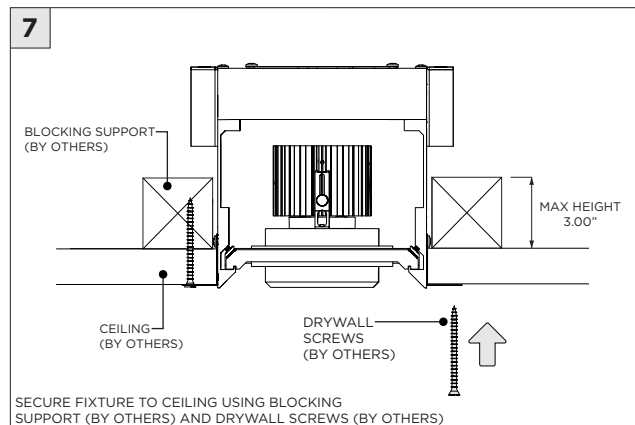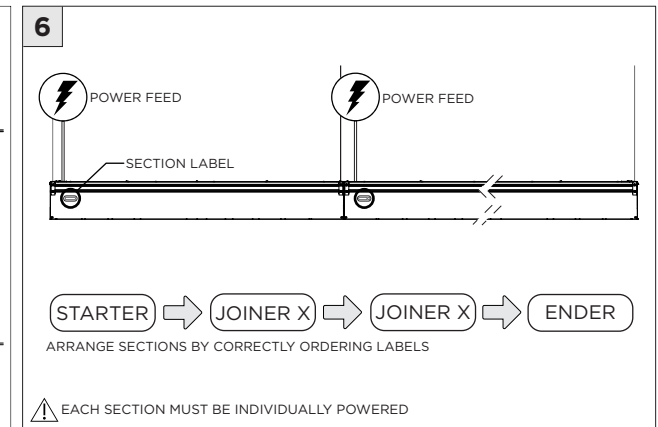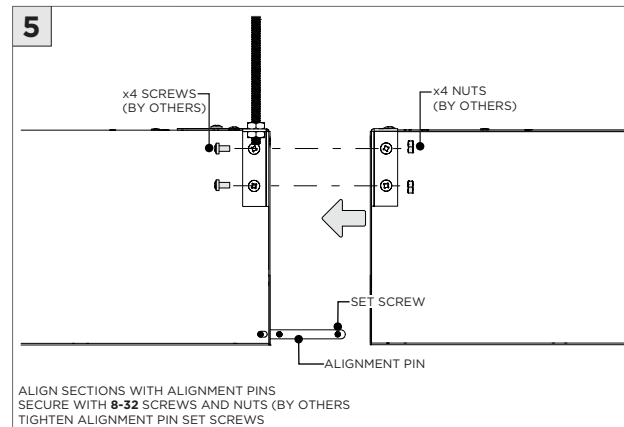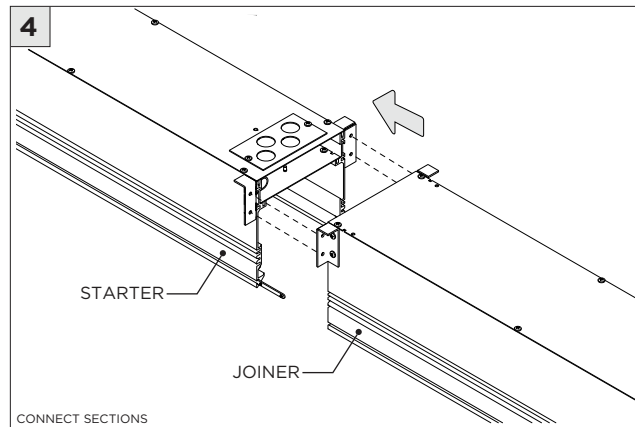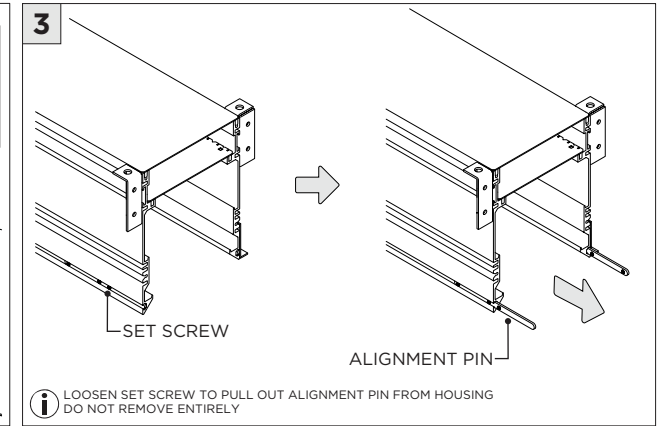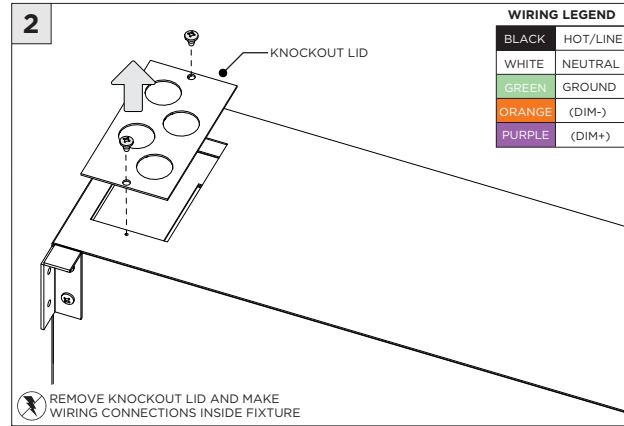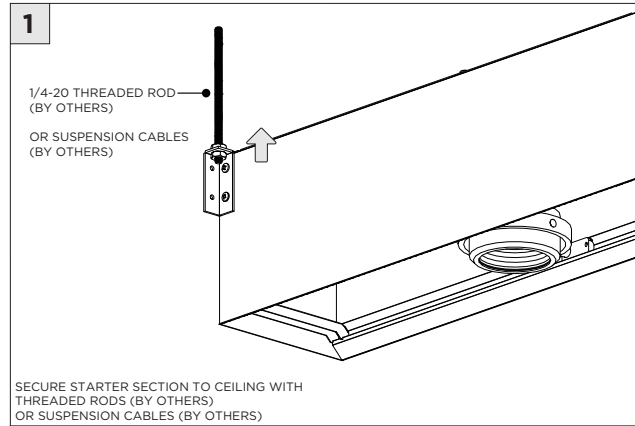

10

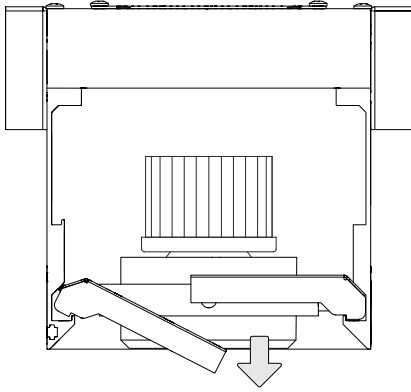


11

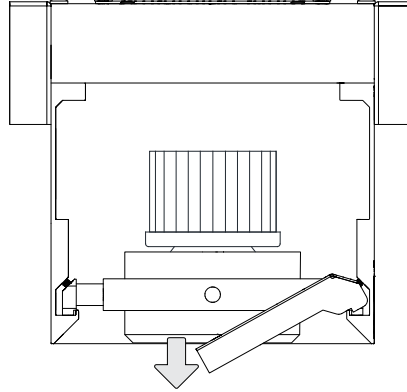


LED SERVICING - GIMBAL

1

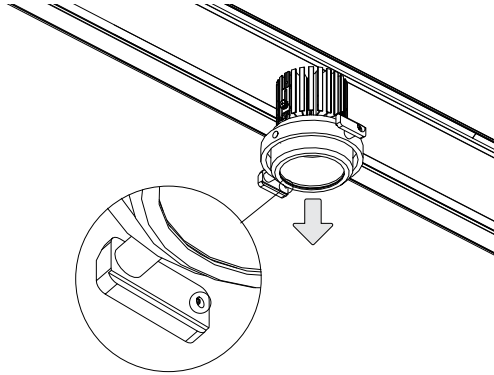


2

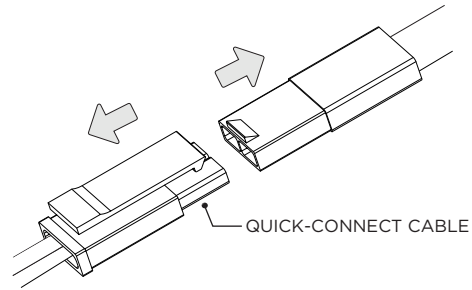


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

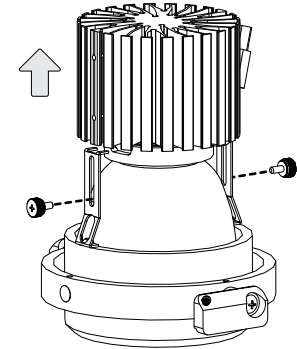


4

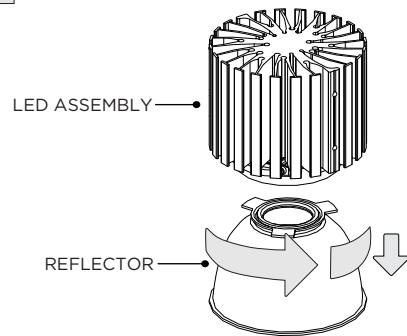

TWIST REFLECTOR TO REMOVE FROM LED ASSEMBLY


DL33RA - ADJUSTING DOWNLIGHT ANGLE

1

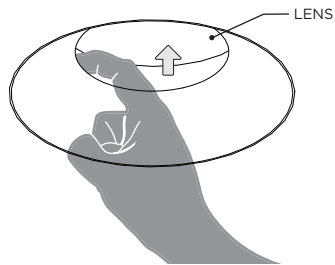


LIFT LENS AND DETATCH INSERT FROM LED ASSEMBLY


2

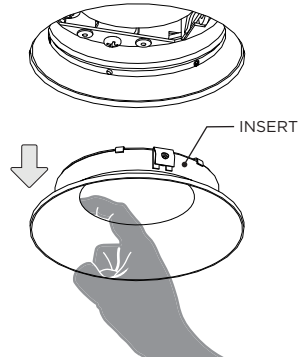

3

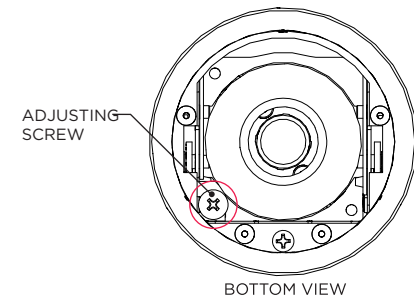


4

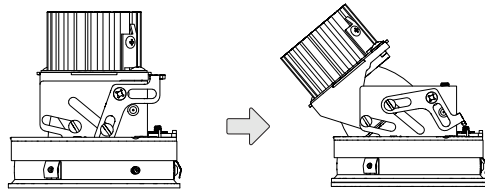


DL33SA - ADJUSTING DOWNLIGHT ANGLE

1

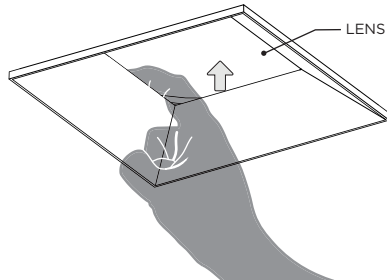


LIFT LENS AND DETATCH INSERT FROM ADAPTER RING


2

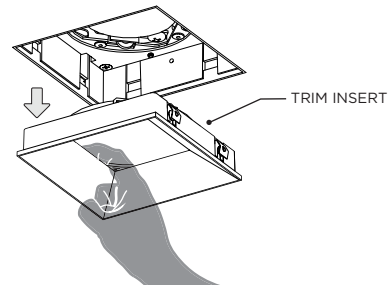

3

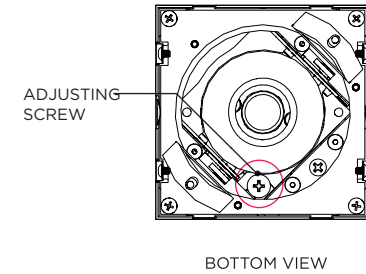


4

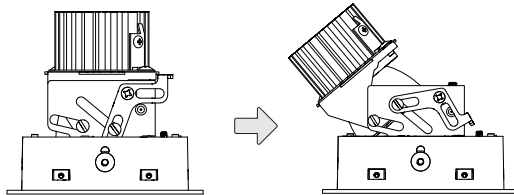


LED SERVICING - DL33R

1

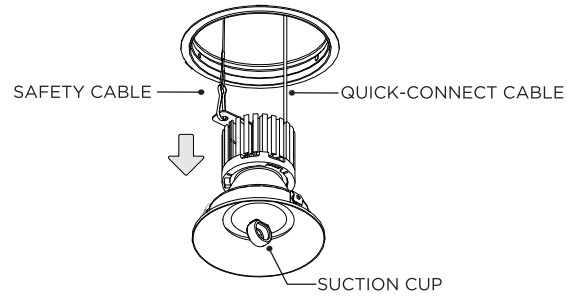


REMOVE LED ASSEMBLY FROM CEILING

2

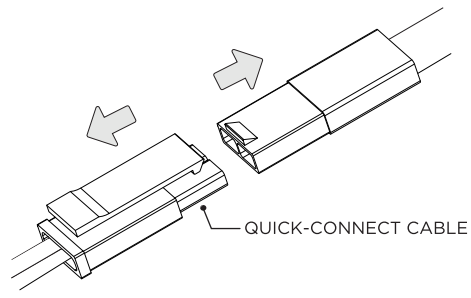


DISCONNECT SAFETY CABLE & QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

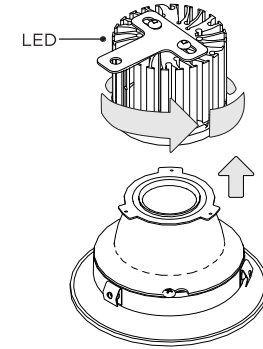


4 FOR DL45

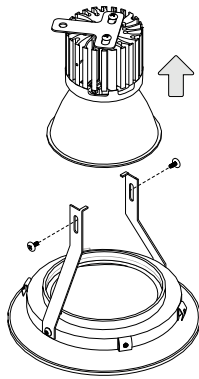


LED SERVICING - DL33RA

1

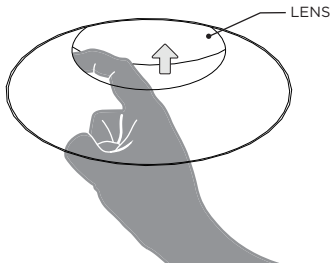


LIFT LENS AND DETATCH INSERT FROM LED ASSEMBLY

2

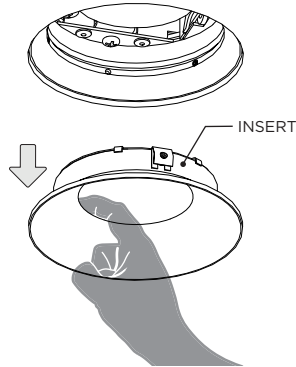


3

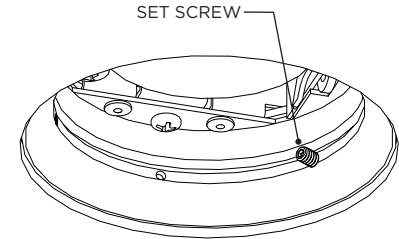

LOOSEN THREE SET SCREWS INSIDE ADAPTER RING


⚠ DO NOT FULLY REMOVE SET SCREWS
FROM ADAPTER RING

4

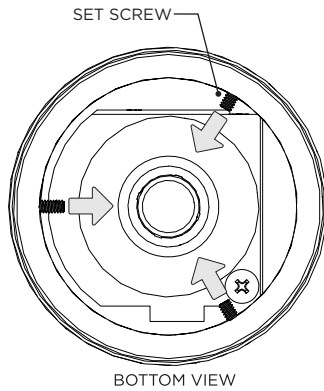


BOTTOM VIEW

5

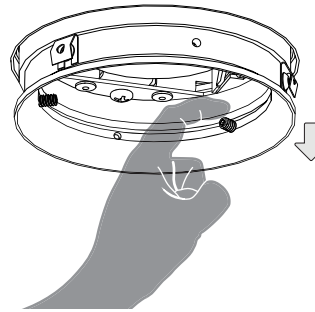


UNCLIP ADAPTER RING FROM CEILING BY PULLING DOWN ON EACH SET SCREW

6

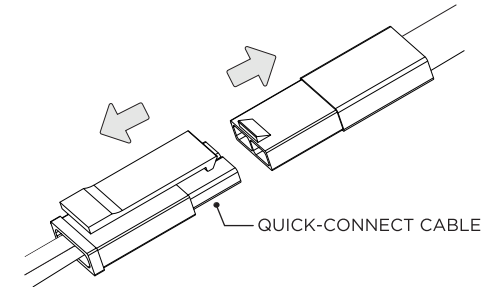


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

7

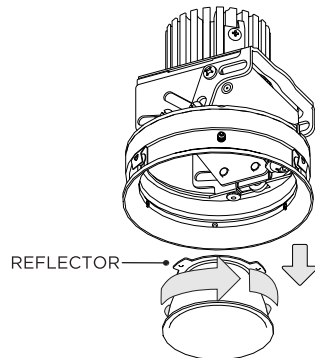


TWIST REFLECTOR TO REMOVE

8

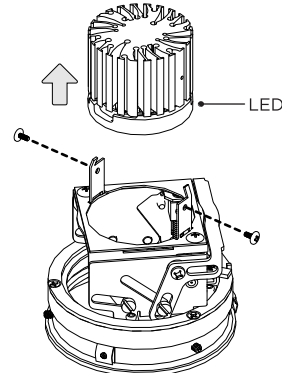


LED SERVICING - DL33S

1

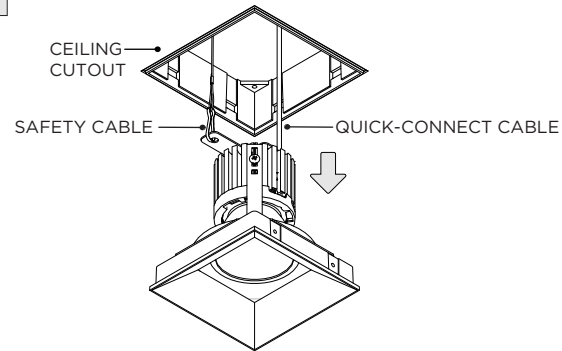

REMOVE LED ASSEMBLY FROM CEILING


2

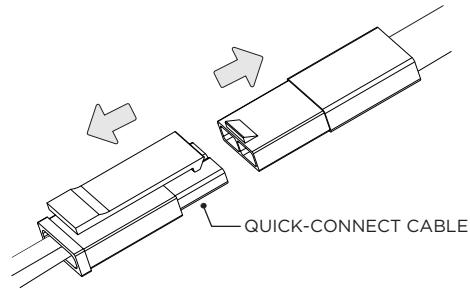

DISCONNECT SAFETY CABLE & QUICK-CONNECT CABLE FROM LED ASSEMBLY


3

FOR DL33/DL45

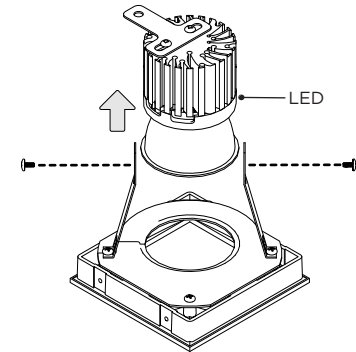


LED SERVICING - DL33SA

1

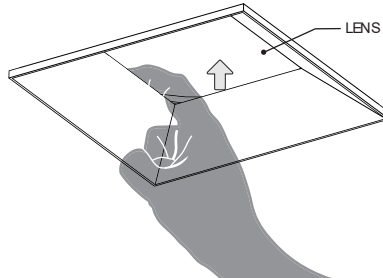


LIFT LENS AND DETACH INSERT FROM ADAPTER RING

2

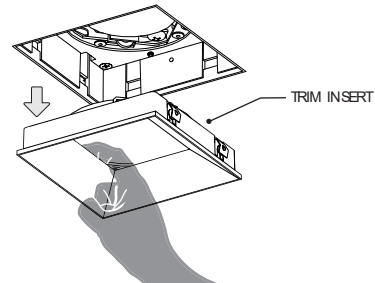


3

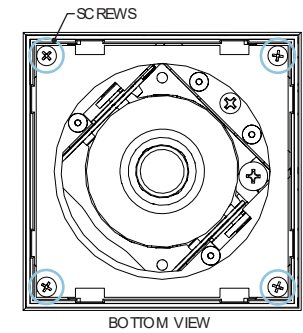


REMOVE 4 SCREWS TO DETACH LED ASSEMBLY FROM CEILING

4

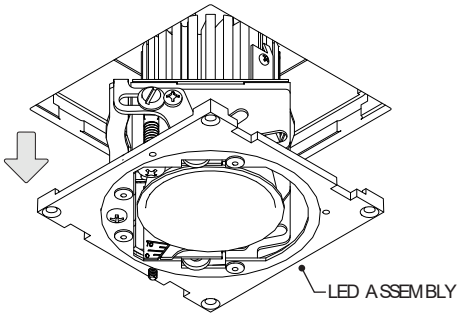


5

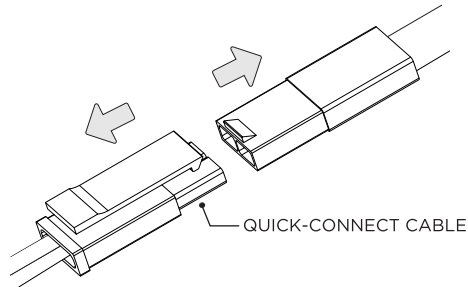


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

6

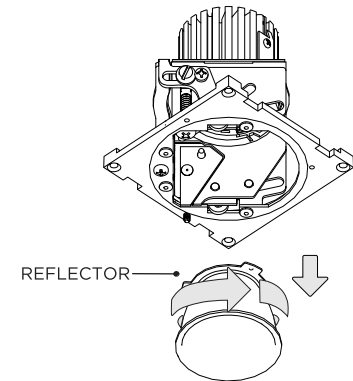


TWIST REFLECTOR TO REMOVE

7

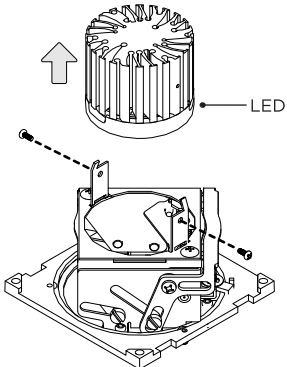


LED SERVICING - DZ33R

1

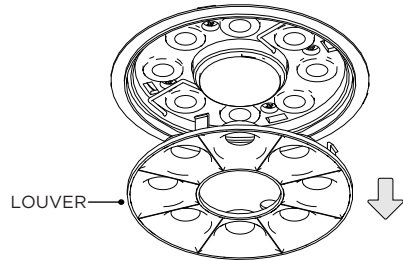


UNCLIP LOUVER FROM LED ASSEMBLY

2

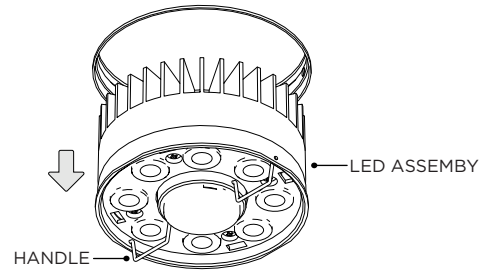


PULL DOWN ON HANDLES TO UNCLIP LED ASSEMBLY FROM CEILING

3

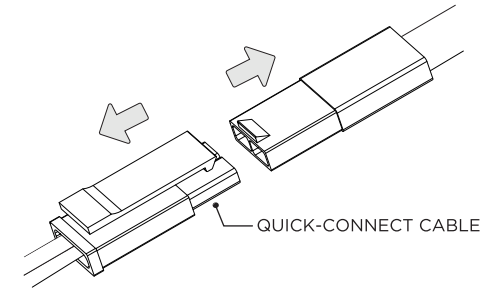


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

4

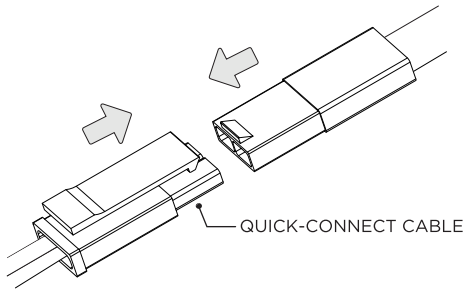

CONNECT QUICK-CONNECT CABLE TO NEW LED ASSEMBLY


5

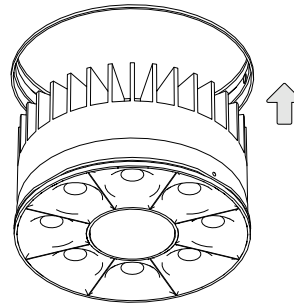

INSERT NEW LED ASSEMBLY INTO CEILING


LED SERVICING - DZ33S

1

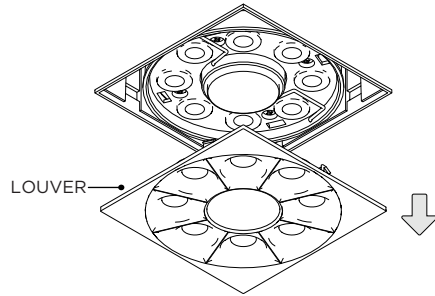


REMOVE LOUVER FROM LED ASSEMBLY

2

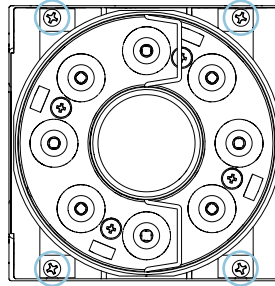


LOCATE FOUR SCREWS

3

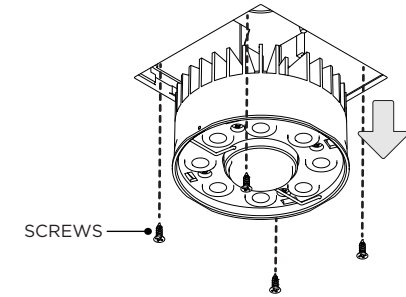


UNSCREW SCREWS TO REMOVE LED ASSEMBLY

4

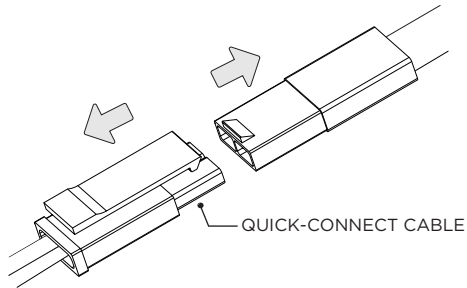


DISCONNECT QUICK-CONNECT CABLE FROM LED ASSEMBLY

5

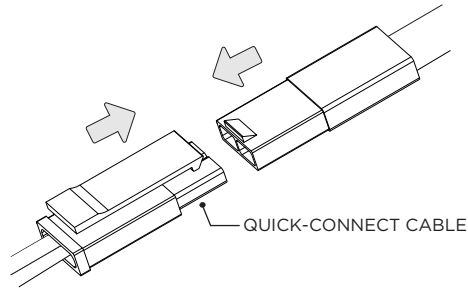


CONNECT QUICK-CONNECT CABLE TO NEW LED ASSEMBLY

6

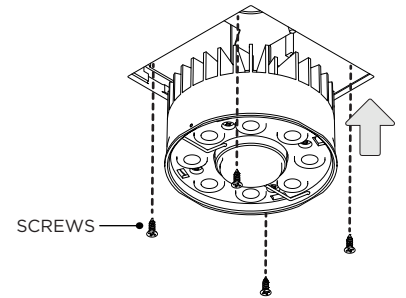

SCREW NEW LED ASSEMBLY INTO CYLINDER


7

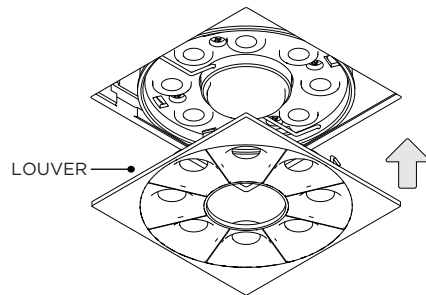

CONNECT QUICK-CONNECT CABLE TO NEW LED ASSEMBLY
www.3GLIGHTING.com | P: 905-850-2305 TF: 888-448-0440


LINEAR LED SERVICING

1

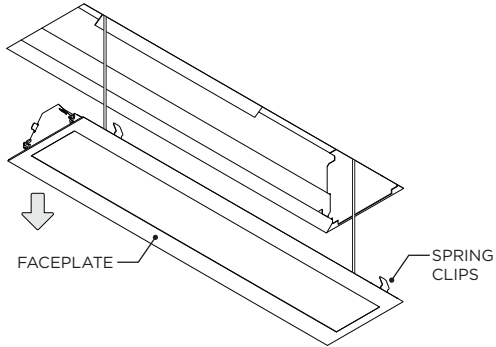


REMOVE FACEPLATE FROM FIXTURE HOUSING

2

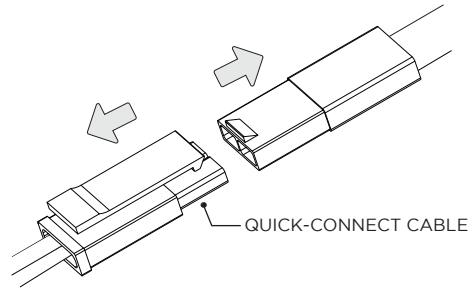


DISCONNECT SAFETY CABLE & QUICK-CONNECT CABLE FROM LED ASSEMBLY

3

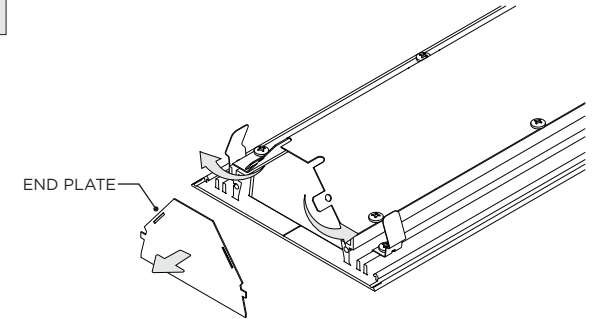


REMOVE END PLATE FROM BOTH ENDS OF FACEPLATE ASSEMBLY

4

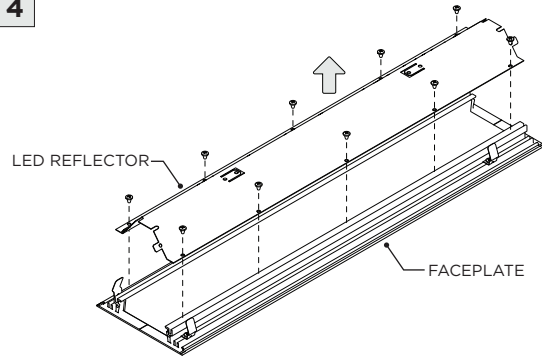


REMOVE LED REFLECTOR FROM FACEPLATE

4A FOR FACEPLATES WITH MULTIPLE REFLECTORS

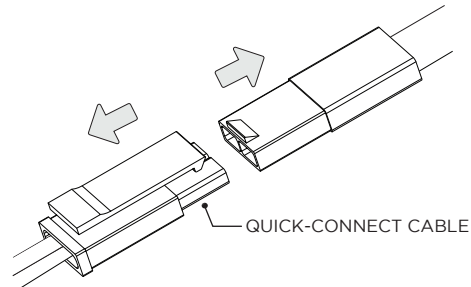


DISCONNECT QUICK-CONNECT CABLE BETWEEN REFLECTORS BEFORE REMOVAL

5

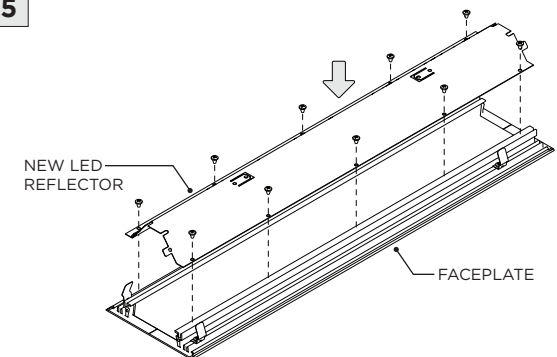


5A FOR FACEPLATES WITH MULTIPLE REFLECTORS

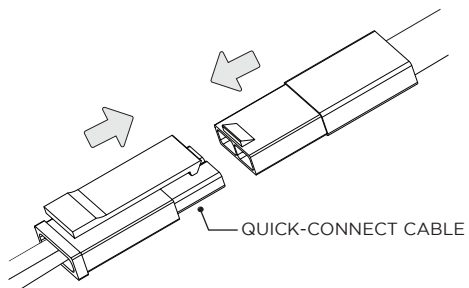


CONNECT QUICK-CONNECT CABLE BETWEEN REFLECTORS AFTER INSTALLATION

6

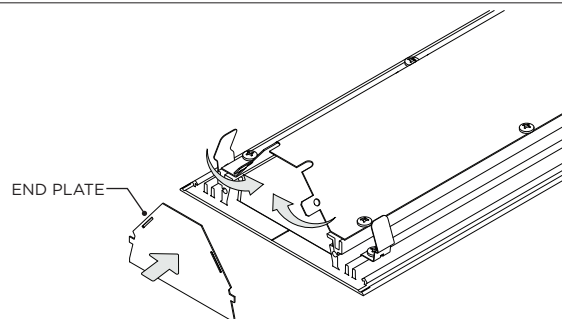

INSTALL END PLATE ON BOTH ENDS OF FACEPLATE ASSEMBLY

7

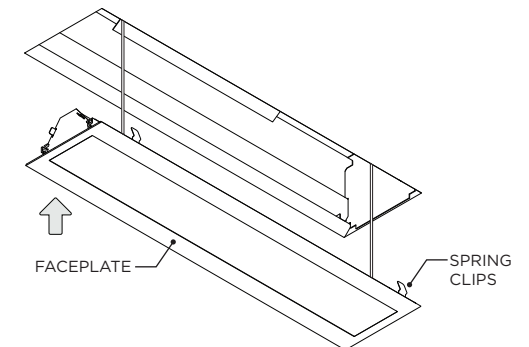

CONNECT SAFETY CABLE & QUICK-CONNECT CABLE TO LED ASSEMBLY
REATTACH FACEPLATE TO FIXTURE HOUSING

DRIVER SERVICING

